




Sony Cyber-shot DSC-T9 Front Cover Replacement

This guide gives instructions on how to remove the front cover of the Sony Cyber-shot DSC-T9 camera.

Written By: Stephannie Allen

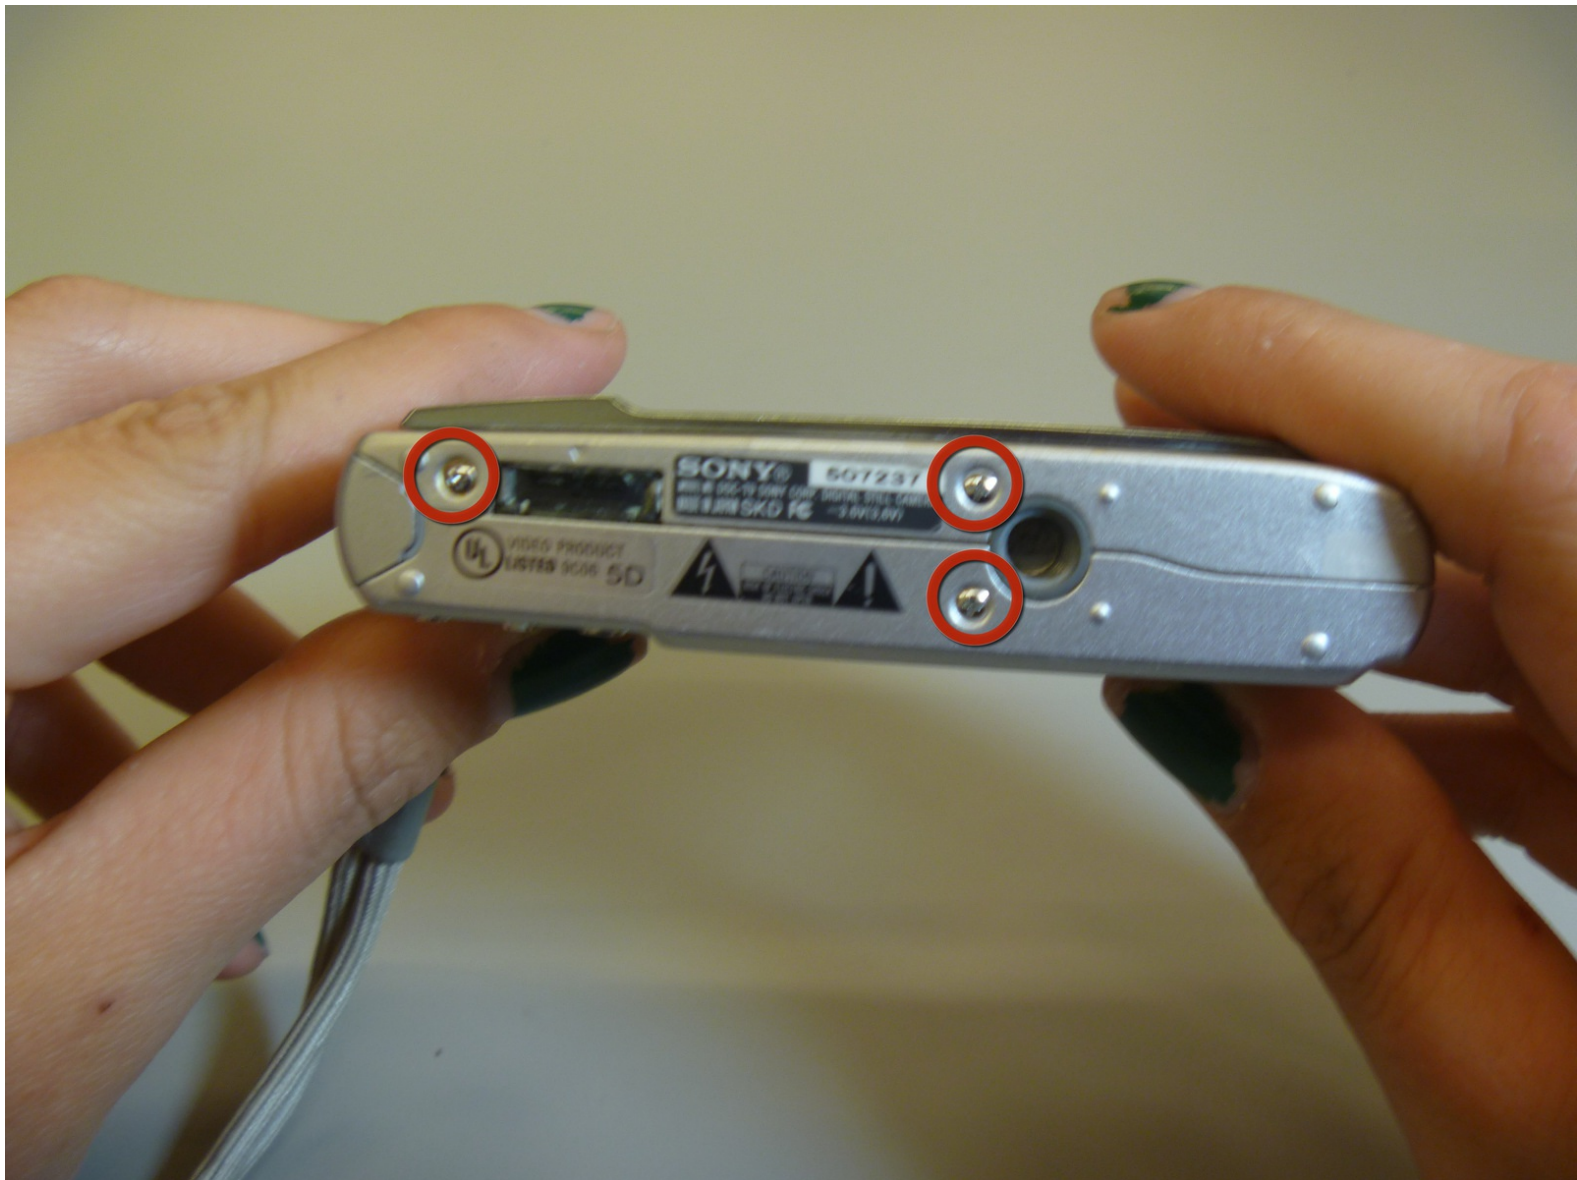

INTRODUCTION


This guide will allow the user to remove the front cover of the camera, necessary for most other steps.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

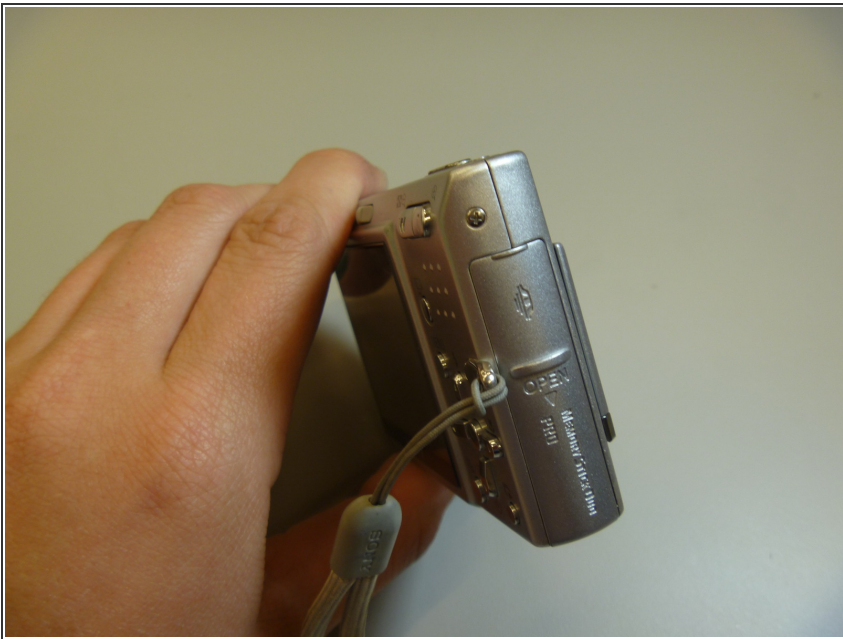

- The battery cover is located on the right side of the camera.
- Slide the cover to expose the battery.

Step 2

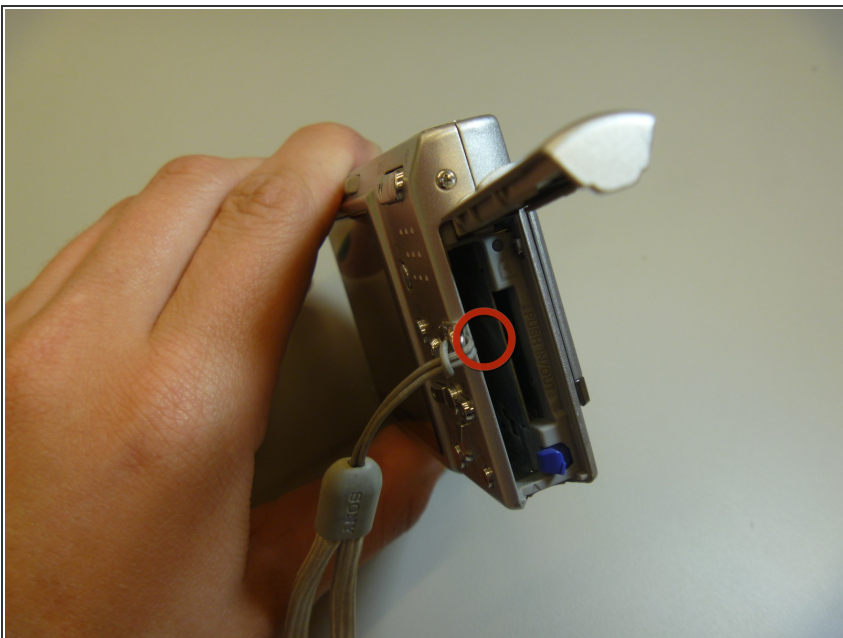


- Ensure that the battery lines up properly with the slot in the camera.
- Slide battery in.
- Slide cover closed.
- ⓘ Battery not shown

Step 3 — Front Cover




- Remove screws from outside of camera. There are 6 screws total.
- 3 screws on underside.
- 1 screw on right side, near battery cover.
- 2 screws on left side.

Step 4

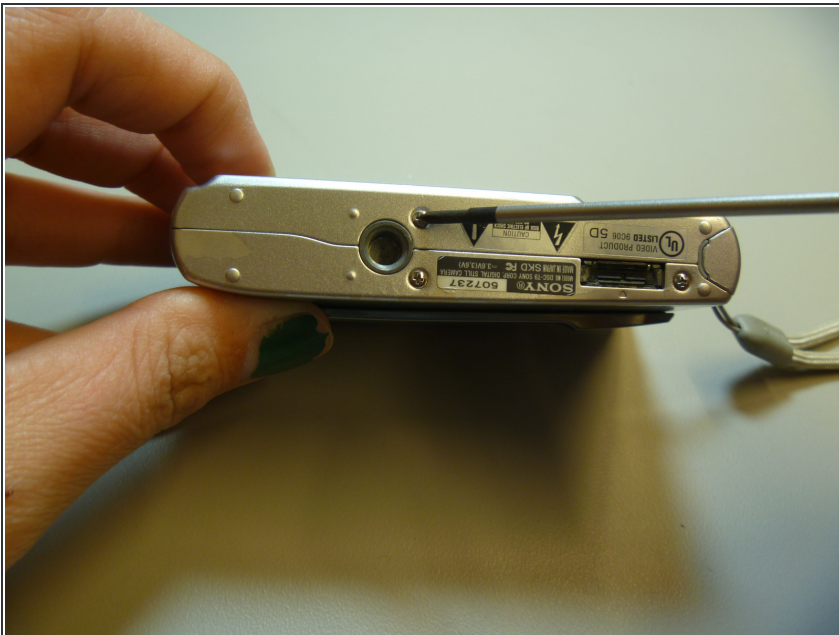


- Use screwdriver to remove screws.

Step 5

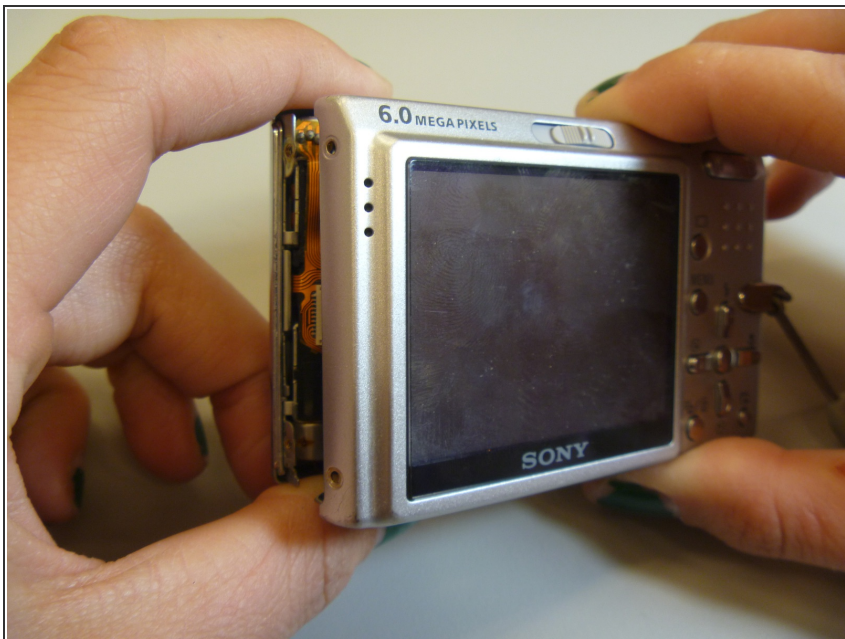

- Gently pull the front cover off of the main camera.
- All of the inner parts of the camera are attached to the back screen.

Step 6

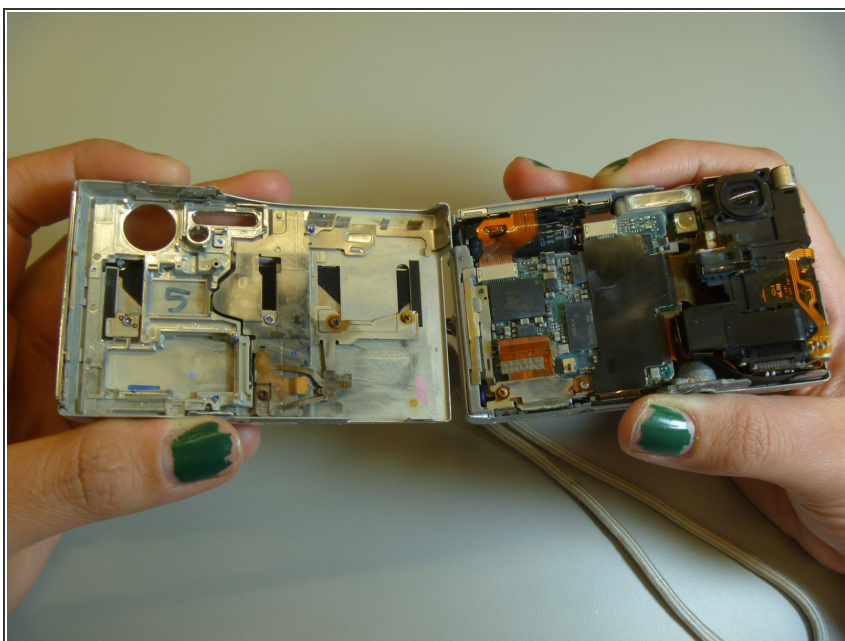

- The front cover is now removed from the camera and the internal hardware is now exposed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 03:15:19 PM.